

# The Trolley™ Monitor Lift



## Installation Guide

# Trolley™ Monitor Lift Installation Guide

**Step 1:** After placing desk in the desired location, remove the modesty panel by lifting up and out.



**Step 2:** Once you have access to the modesty compartment, ensure the Trolley™ is connected to the included power strip, and to a wall or floor power source.



**Step 3:** Remove and discard the shipping screw and label.



# Trolley™ Monitor Lift Installation Guide

**Step 4:** Activate the lift by pressing the up button. The doors will open and the monitor arm will rise. Position your hands against the door and gently apply pressure to prevent the door from closing. A sensor will detect the resistance and safely disengage the monitor.



**Step 5:** Remove protective cover from the monitor arm, exposing the strain relief plate.



**Step 6:** Remove the right screw securing the strain relief and rotate the plate up as shown below.



NOVA Solutions, Inc.

421 Industrial Ave.

Effingham, IL 92401

800-730-6682 • 800-940-6682

www.novadesk.com • sales@novasolutionsinc.com



© 2016, NOVA Solutions, Inc. - NLS\_INT 5/19

# Trolley™ Monitor Lift Installation Guide


**Step 7:** Route the monitor power and input cables through the door and up the monitor arm.



**Step 8:** Secure the strain relief over the monitor cables and re-attach the protective cover.



**Step 9:** Secure the monitor cables to clips located on either side of the modesty compartment and route the cable through grommets to the power strip and CPU shelf.

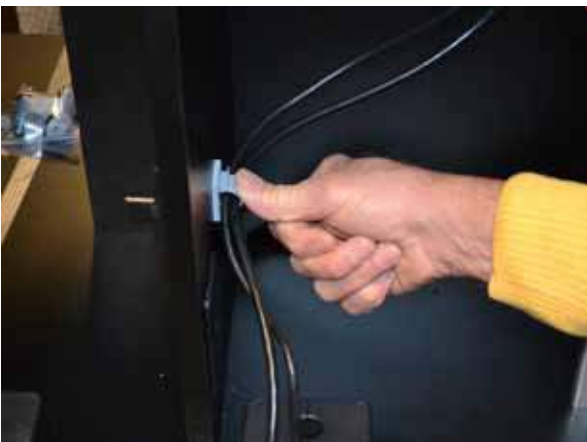

**Setup is complete!** You can now affix the monitor to the VESA plate on the monitor arm and install computer and peripherals or re-attach the modesty and proceed to the next unit.

NOVA Solutions, Inc.

421 Industrial Ave.

Effingham, IL 92401

800-730-6682 • 800-940-6682

www.novadesk.com • sales@novasolutionsinc.com



© 2016, NOVA Solutions, Inc. - NLS\_INT 5/19