

## Item #: ALSTR 06A-000-000



Cover Page	Ι
Unpacking	I-0
Utilities Location	I-1
Base Cabinets	I-2
Achorbolt Layout Full Scale	I-3t
Upper Cabinets	I-4
Countertop & Hardware	I-5
Final Assembly	I-6
Sales Drawing Render	S-0
Sales Drawing	S-1

Install - Cover Page




## STERILIZATION CENTER



# Install - Unpacking

## Item #: ALSTR 06A-000-000

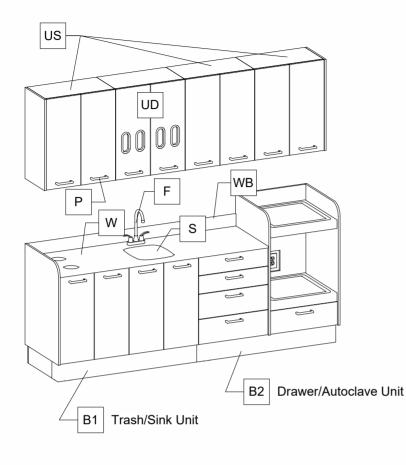


Packing List				
Mark	Description	Qty		
Cabine	try			
B1	Trash/Sink Unit	1		
B2	Drawer/Autoclave Unit	1		
UD	Upper Dispense Cabinet	1		
US	Upper Cabinet	3		
W	Work Surface	1		
WB	Backsplash	1		
Hardwa	are	·		
	#12 3" Wood Screws	32		
	Sex/Sleeve Bolt	16		
	Wedge Anchor Bolts	4		
Р	Door/Drawer Pull	17		
Other		·		
	Strainer	1		
	Tube of Caulk	1		
F	Faucet	1		
S	Undermount Sink	1		

**Skid A** contains: Storage & Sink Cabinets pre-attached to each other and a Toe Kick.

**Skid B** contains: Drawer & Autoclave Cabinet preattached to each other and a Toe Kick.

**Skid C** contains: All Wall cabinets, work surface and back splash.

- 1. Remove all packing material.
- 2. REMOVE HARDWARE PACK FROM SINK BASE ON **SKID B**.

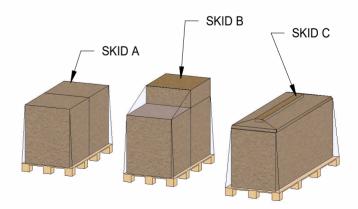


217-342-7070

# Item #: ALSTR 06A-000-000

Install - Utilities Location

Backers			
Description	Length		
2x6 Backer	8' - 1 9/32"		
2x6 Backer	8' - 1 9/32"		
2x6 Backer	8' - 1 9/32"		
2x6 Backer	8' - 1 9/32"		
	32' - 5 3/32"		

Plumbing Utilities -by others-				
Mark	Description	Qty		
Н	Hot Water Supply	1		
С	Cold Water Supply	1		
D	Sanitary DWV	1		

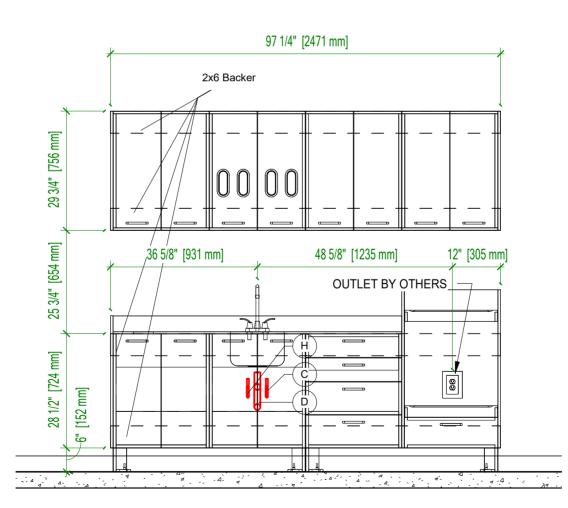

## STERILIZATION CENTER

# Item #: ALSTR 06A-000-000

LINEA

#### INSTALL TOE KICK ASSEMBLIES


 Using Template <u>Drawing I-3t</u>, Drill anchor bolt holes (3/8" dia x 2" min) into floor as the designated locations (shown in BLUE).


Note: Toe kick leveling glides can be adjusted (top-down access) with flat head or 7/32 socket. ALL LEVELING GLIDES ARE PRE-INSTALLED ON TOE KICKS

2. Place anchors through toe kick into drilled holes for all toe kick sections. [Detail A]

Note: Do not secure anchors to allow movement until final assembly/leveling is completed

- 3. Attach to B2 to B1 with sex/sleeve bolt set (4) [DETAIL SSB]
- 4. Attach to solid wall blocking/studs with #12-3" wood screws. [DETAIL CWS]

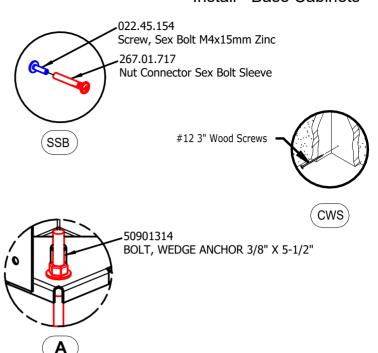

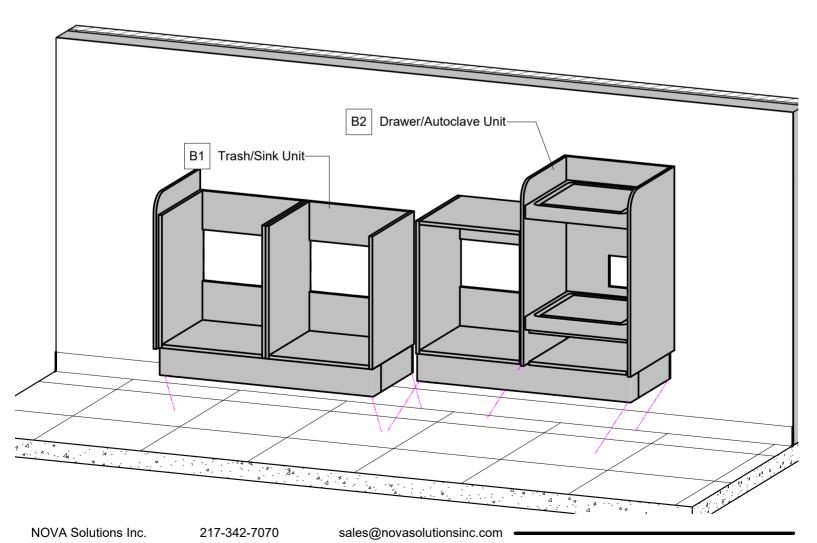

## Install - Base Cabinets



#12 3" Wood Screws

SSB

# Item #: ALSTR 06A-000-000

CWS

Screw, Sex Bolt M4x15mm Zinc

Nut Connector Sex Bolt Sleeve

022.45.154

267.01.717

Install - Upper Cabinets


#### **INSTALL BASE CABINET**

1. Remove all doors & drawers.

Doors/drawers are matching/coordinated sets. Keep track of where each was removed. Doors & drawers must be reinstalled in same configuration at end of assembly.

2. Place left most wall cabinet on wall as shown and attach to solid wall blocking/studs with #12-3" wood screws. **[DETAIL CWS]** 


3. Repeat for remainder for remiander of wall cabinets as shown and connecting them to each other with sex/sleev bolt set **[DETAIL SSB]** 

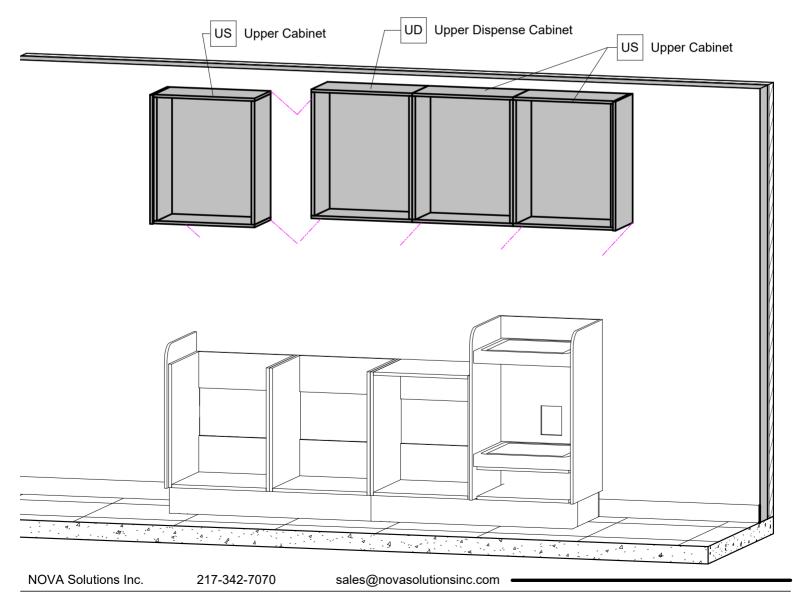






## Install - Countertop & Hardware

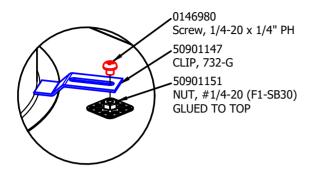

#### **INSTALL COUNTERTOP TO SINK BASE CABINET**

- 1. Install Sink, Faucet, Strainer. \*\*Apply provided silicone to the <u>sink</u> prior to installing\*\*
- Place Countertops on respective base cabinets.
  \*\*Apply provided silicone to secure work surface to base cabinet\*\*


**\*\*NOTE: FINAL PLUMBING CONNECTIONS BY OTHERS\*\*** 

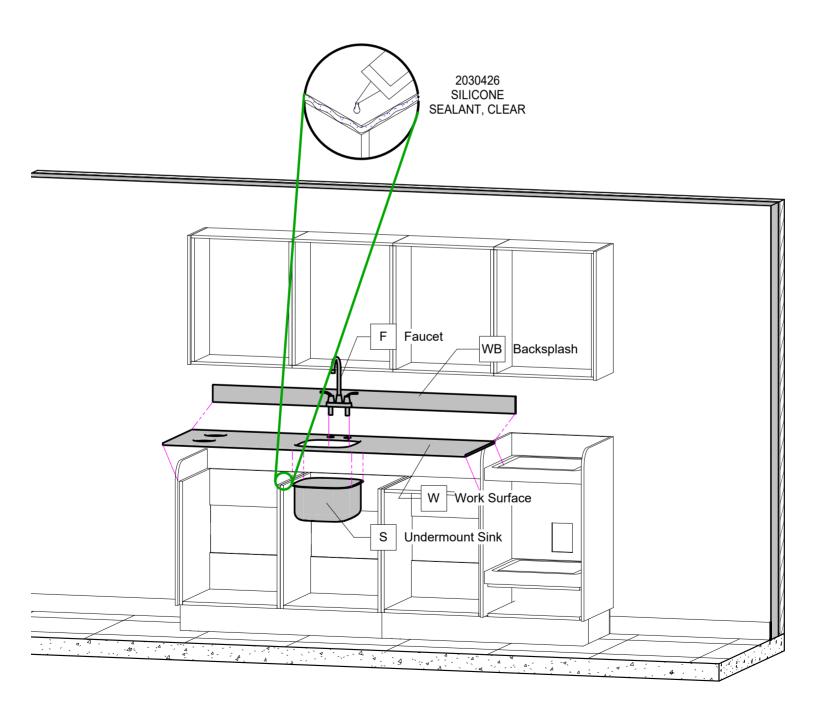



#### \*\*NOTE: FINAL ELECTRICAL & PLUMBING CONNECTIONS BY OTHERS\*\*

- 1. REINSTALL DOORS/DRAWERS IN ORIGINAL POSITIONS FROM WHERE THEY WERE REMOVED.
- 2. Attach Door/Drawer Pulls and remaining components as needed.
- 3. ADJUST TOE-KICK LEVELERS AND TIGHTEN ANCHOR NUTS.
- 4. CHECK FOR ALIGNMENT OF DOORS & DRAWERS, FINAL ADJUSTMENTS MAY BE NECCESSARY.

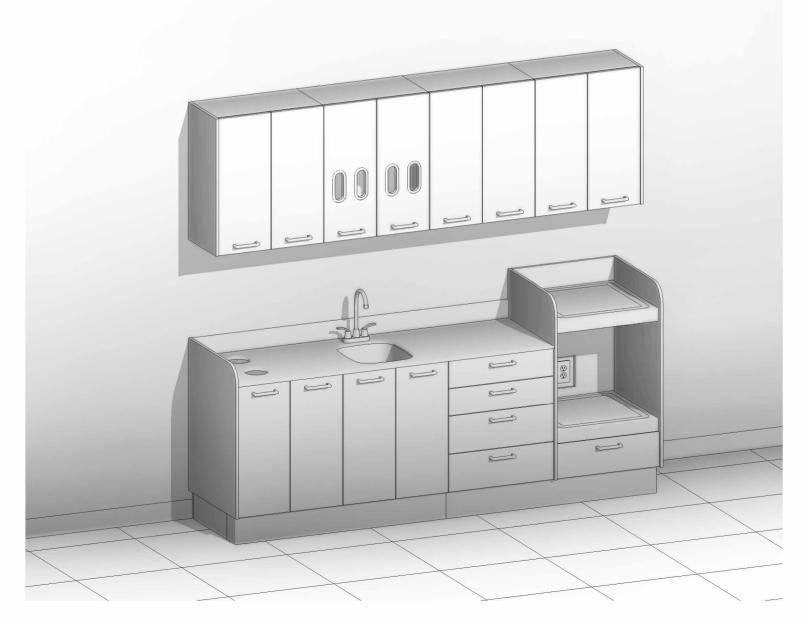

217-342-7070